

8/25

printer_subunit_version	Meaning
00₁₆	Version 1.0 of the printer subunit specification
all others	Reserved for future specification.

FIG.9

12/25

Value	Symbol	Meaning
01 ₁₆	get	Get the current operation modes
02 ₁₆	set	Set the specified operation modes
03 ₁₆	query	Get the supported operation modes
Other values	—	Reserved

FIG.13